

Snowchains.com.au



RUD-matic CLASSIC



Extend the chain as far as possible and push over the tyre from above.



Push the ring ends right behind the tyres.



Spread out the external chain evenly. Drive a quarter of a wheel revolution.



Pull the tensioning chain near the tyre tread from back to front.



Pull the tensioning chain through the yellow hole plate and lock in place under tension.



Angle the tensioning chain in the groove direction and pass through the pull-through eye. Hook the fastener to the outer chain.

Snowchains.com.au

Give your vehicle and family the protection they need
hire or buy only quality snow chains

1300 135019